

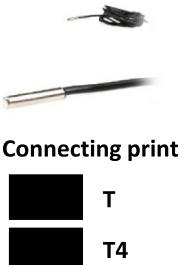


INSTALLING MOTOR VALVE WITH 12 PIN PLUG

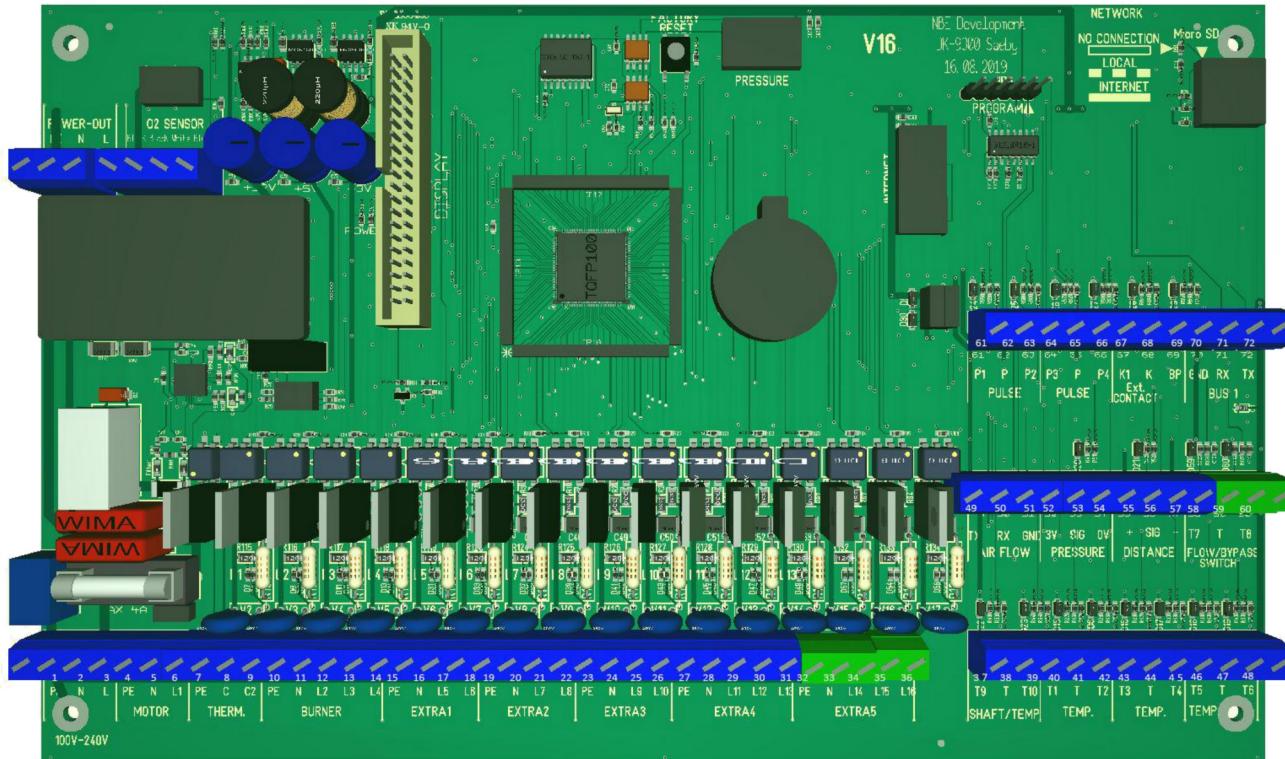

1. Mount the 3-way valve on the flow from the boiler.
2. AB flow into the valve.
3. B for house/radiator/floor heating.
4. A to DHW.
5. The temperature sensor is to be mounted in the DHW tank. If it is mounted high (1), it will give less hot water, but fewer start-ups. If it is mounted low (2), it will give more hot water, but starts faster while tapping. That gives more start-ups/day.
6. Activate the output that has been chosen in the controller
7. Choose a wanted temperature in DHW in the controller

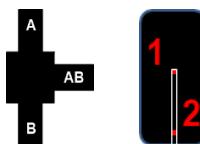

Connecting print



T

T4



MOTORVENTIL MONTERING

12 POLET STIK



Tilslutning 230 Volt AC




L

N

Fra L12-L16

U14-U20, er kun tilgængelige,
hvis der er monteret
udvidelsesprint til styringen

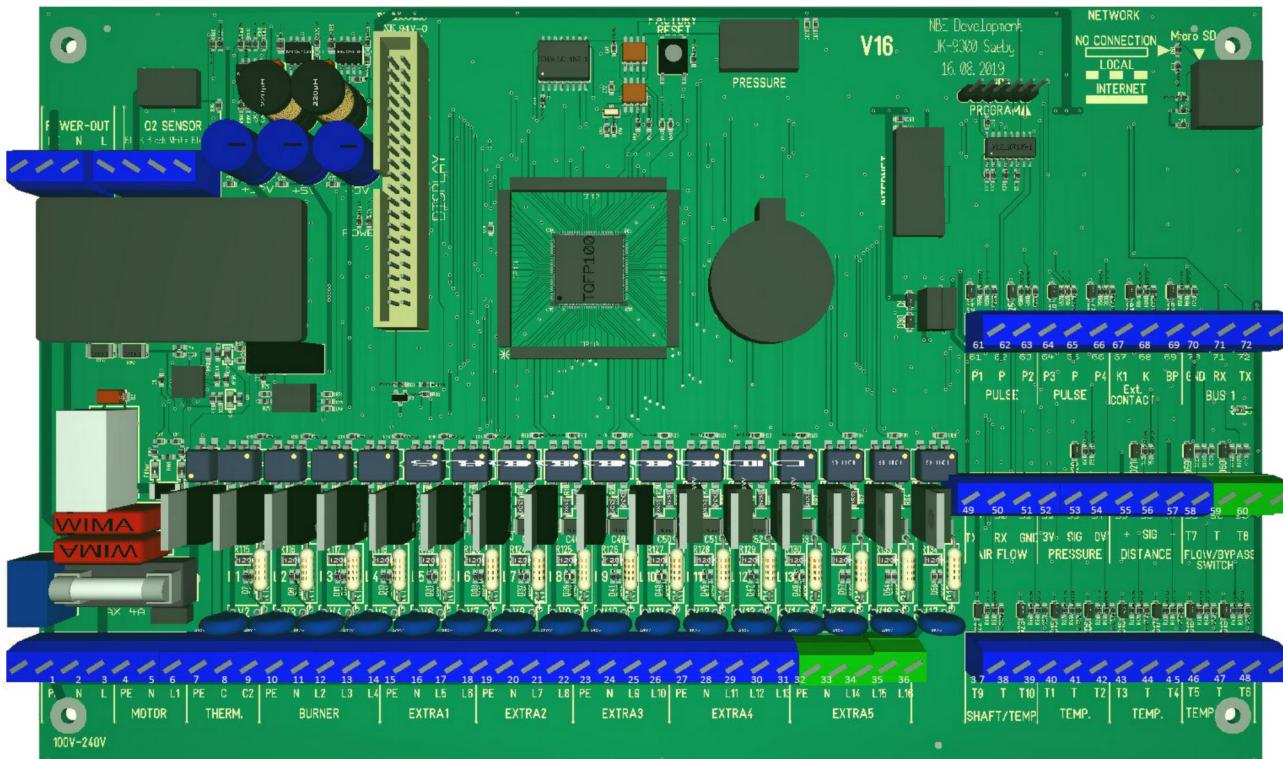

Skal aktiveres fra "forhandlerniveau"



1. Montér 3-vejs ventilen på fremløb fra kedlen
2. AB flow ind i ventil
3. B til hus/radiator/gulvarme
4. A til VVB
5. Temperatursensor monteres i VVB Monteres den højt (1) giver det mindre varmt vand, men færre opstartninger Monteres den lavt (2), er der mere varmt vand, men der startes hurtigere op ved tapning. Det giver flere opstørninger/dag
6. Aktiver udgang der er valgt i styringen
7. Vælg en ønsket temperatur i VVB i styringen

Tilslutning Print

